

FIS BLUE QSEAL TERMINATION KIT



This kit includes all the tools needed to terminate LC connectors and QSeal 1.25mm termini in a workshop or factory setting. Our basic tool kit is augmented with 1.25mm ferrule-specific tools and consumables.

Ground Shipping Only.

PARTS LIST


- FIS Blue Basic Tool Kit
- Glass Polish Plate
- LC/MU Crimp Tool
- Rubber Polish Pad
- Universal 200X Microscope
- 5x 4gr Packets of Blue Dye Epoxy
- LC/MU Universal 1.25mm Polish Puck
- 5x Epoxy Syringes
- 5x Diamond Polish Film, 6" x 6" 0.5µm
- 5x Diamond Polish Film, 6" x 6" 1.5µm



ORDERING INFORMATION

Part Number	FB-0053LM
Dimensions	20"L x 8"H x 15"W
Weight	10lbs.

161 Clear Road, Building One | Oriskany, NY 13424 | www.fisblue.com | info@fisblue.com | 1.877.347.0091

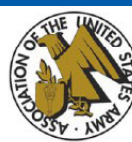

Rev. B 5-2021